

MiniTech

High Security Lock for Safes & Vaults



 **TECNOSICUREZZA**
Locks & Security Systems

User Operating Instructions

Standard Specification

SAFELOCK
SYSTEMS

Available users and default codes

User	User ID	Default Code
Master	N/A	12345678
Manager	01	123456
Users 02-09	02-09	Deleted – Must be added by the Manager
User 10	10	Deleted – Must be added by the Manager. User 10 is the time delay override user

Using the keypad

Press any key to wake the display.

If no keys are pressed for 30 seconds, the keypad display will automatically switch off.



To scroll menu functions press 

To accept press 

To exit a function press  or scroll to EXIT.

Shortcuts for Special Functions

Press and hold the relevant key to access the special function.

Key	Special Function
0	Change Code
1	Manage users
2	Lock Setup (Not applicable)
3	Dynamic Codes (Not applicable)
4	Block the lock
5	Test the keypad
6	Change keypad language
7	Audit
8	View keypad version / Adjust contrast
9	Time delay menu
	Back to start menu
	Access the master menu (Hold)

To open the lock

Enter a valid user ID and 6 digit code.



To open the lock if time delay is active

Enter a valid user ID and 6 digit code.

Wait for the time delay period to elapse.

The open window will be indicated with the onscreen message "OPEN WINDOW" and double beeps at 5 second intervals.

Enter a valid user ID and 6 digit code.

To stop time delay counting, press  then  to confirm.

User 10, if installed, is able to override time delay and open the lock immediately.

To change code

Press and hold 0.

Enter the current User ID and 6 digit code.

Enter the new 6 digit code twice.

To manage users (Manager Only)

Press and hold 1.


Enter the Manager code.


The following symbols indicate the status of each user:

Symbol	Status
No Symbol	User deleted
✓	User installed and enabled
X	User disabled

Enter the ID of the user you wish to add (Use 2 digits)

The cursor will flash underneath the user ID.

Press  to access options.

Press  to scroll through options and follow the onscreen instructions:

Install – add a user code. The user must enter their code twice.

Delete – if a user is installed, their code can be deleted, making it possible to add a new code.

Disable – If a user is installed, their code can be temporarily disabled.

Enable – If a user code has been temporarily disabled, it can be re-enabled.

To block the lock (Manager Only)


Blocking the lock prevents access to all lock functions (Opening and special functions) until the time and date that is specified (Up to 31 days).

Warning: Once blocked, the lock cannot be unblocked. It is important to ensure that the correct values are entered.

Press and hold 4.

Enter the manager code.

If weekly timelock is set, the display will show the next opening time.

Enter the date and time the lock should be blocked until, then press 

The display will show "BLOCK THE LOCK". Press  to confirm.

To test the keypad

Press and hold 5.

Enter the sequence of keys displayed

- Buttons functioning normally will sound a short beep.
- Buttons not functioning normally will sound a long beep.

To change the language

Press and hold 6.

Press 1 for English.

Press 2 for Italian.

Press 3 for Spanish.

Press  to confirm.

To download or view the audit (Manager Code)

Press and hold 7.

Enter the Manager code.

If the audit is to be downloaded and viewed on a PC, insert a prepared Dallas key into a Dallas key reader and insert the reader into the port on the side of the MiniTech Keypad. Please refer to MiniTech Audit Instructions.

If the audit events (Lock opening and closing only) are to be viewed on the MiniTech Display.

Press

Press to scroll through each event.

Press to exit.

To view the keypad firmware release

Press and hold 8.

The firmware version and release date will display.

To adjust keypad contrast

Press and hold 8.

The firmware version and release date will display.

Press and hold 8 again.

Select the desired contrast level.

To add time delay values

Press and hold 9.

Enter the Manager code.

The display will show the current time delay values.

Press

Enter time delay value e.g. 01 minutes.

Enter open window value e.g. 01 minutes (The minimum open window value is 01).

Press

Note: If the time delay values are to be reduced or removed, the lock must first be unlocked during the open window and the bolt must be held in the open position before again accessing the time delay menu. The minimum open window value is 01.

To access the Master Menu

Press and hold

Enter the master code.

To adjust time and date (Master Only)

Access the Master menu, scroll to TIME AND DATE SETTINGS.

Press to view the time and date.

Press again to enter new values.

Press to accept.

To adjust weekly open periods (Master Only)

Weekly open periods are the times when the lock can be opened with a valid code, and special functions can be accessed.

Access the Master menu, scroll to TIMELOCK SETTING. Scroll to WEEKLY TIMELOCK SETTING.

Press to accept. The options available are:

ADD NEW VALUES / VERIFY OR DELETE VALUES

Select ADD NEW VALUES.

Press to scroll through the days.

Enter the start time and end time of the opening period.

Press to accept.

Warning:

- The timelock menu is only accessible when timelock is not active.
- The values entered are the times when the lock is accessible. Ensure that values are entered for every applicable day before accepting **all** values.

To adjust closing periods (Master Only)

Closing periods are occasions when the safe would normally be accessible, and is required to be inaccessible. This overrides the normal weekly timelock. I.e. the lock would normally be accessible on Mondays, but a closing period is set for a public holiday.

Access the Master menu, scroll to TIMELOCK SETTING. Scroll to CLOSING PERIODS SETTING.

Press to accept. The options available are:

ADD NEW VALUES / VERIFY OR DELETE VALUES

Select ADD NEW VALUES and enter the dates and times required. Up to 30 closing periods for a maximum of 14 days each can be held in the lock memory.

To adjust opening periods (Master Only)

Opening periods are occasions when the safe would normally be inaccessible, and is required to be accessible. This overrides the normal weekly timelock. I.e. the lock would normally be inaccessible on Sundays, but an opening period is set for a special event.

Access the Master menu, scroll to TIMELOCK SETTING. Scroll to OPENING PERIODS SETTING.

Press to accept. The options available are:

ADD NEW VALUES / VERIFY OR DELETE VALUES

Select ADD NEW VALUES and enter the dates and times required. Up to 30 opening periods for a maximum of 14 days each can be held in the lock memory.

To download or view the audit (Master Code)

Access the Master menu, scroll to SYSTEM AUDIT.

If the audit is to be downloaded and viewed on a PC, insert a prepared Dallas key into a Dallas key reader and insert the reader into the port on the side of the MiniTech Keypad. Please refer to MiniTech Audit Instructions.

If the audit events (Lock opening and closing only) are to be viewed on the MiniTech Display.

Press 

Press  to scroll through each event.

Press  to exit.

To change the Master code

Access the Master menu, scroll to CHANGE MASTER CODE.


Enter the new 8 digit code twice.

To manage the manager (Master Only)

Access the Master menu, scroll to MANAGER MANAGEMENT.

The following symbols indicate the status of the manager:

Symbol	Status
No Symbol	Manager deleted
✓	Manager installed and enabled
X	Manager disabled

Press  to scroll through options and follow the onscreen instructions:

Install – add the Manager code. The Manager must enter their code twice.

Delete – if the Manager is installed, their code can be deleted, making it possible to add a new code.

Disable – If the Manager is installed, their code can be temporarily disabled.

Enable – If the Manager's code has been temporarily disabled, it can be re-enabled.

Dynamic Codes (Master Only)

Dynamic Codes, also known as one-time codes or single use codes require additional equipment and PC software. Please refer to MiniTech Dynamic Codes instructions.

Troubleshooting – Display error message

LOCK PENALTY

An incorrect code has been entered 4 times. Wait for the penalty period of 4 minutes to elapse before entering a valid code.

BATTERY LOW

The batteries must be replaced immediately. MiniTech is usually powered with a large battery box mounted inside the safe or vault which takes 6 x alkaline 1.5v (C-Cell) batteries. Please consult the safe or vault supplier for more information on changing batteries. MiniTech can also be powered in an emergency using a 9v alkaline battery from the slot at the bottom of the keypad. Pull the handle of the battery cover and connect the battery to the battery connector located inside the slot.

NO ANSWER

There is a connection fault between the keypad and the lock. Contact a safe engineer.

Troubleshooting – Other errors

The display is not functioning

See BATTERY LOW, the batteries should be replaced

A key does not beep when pressed

Undertake a keypad test (Shortcut key 5). If a button is not operating normally, contact a safe engineer.

The safe or vault door does not open

If the lock system is otherwise operating normally, there is a mechanical fault. Contact a safe engineer.